

ProECU Mitsubishi K-Line



Mitsubishi Lancer EVO5-6-7-8-9  
ECU Reprogramming Tools  
Software Tuning Guide  
1996/2007 Model Year

v2.3

ECU Map Descriptions .....	3
3D Maps .....	3
Fuel Maps .....	3
High Octane .....	3
Low Octane .....	3
Ignition Maps .....	3
VVT (Variable Valve Timing) Map (MIVEC) .....	3
2D Maps .....	4
Boost Limit .....	4
Open Loop Load .....	4
Open Loop Load Throttle .....	4
Injector Battery Voltage Compensation .....	4
Acceleration Enrichment .....	4
Turbo Dynamics .....	4
Wastegate Duty .....	4
Boost Desired Engine Load .....	5
1D Maps - Data Values .....	6
Boost Control - Desired Engine Load OFFSET .....	6
Boost Limit Timer Delay .....	6
Injector Scaling .....	6
Rev Limit .....	6
Speed Limiter (on-off) .....	6
Minimum Coolant Temperature for Closed Loop .....	6
Lean Spool: Enable RPM .....	6
Wastegate Solenoid (Activation-Deactivation) .....	6
High Intake Air Temp Idle .....	7
IC Relay (Intercooler water spray control) .....	7
Stationary Rev Limit – Launch Control .....	7
Additional Maps .....	8
HINTS and TIPS .....	9
Suggest Tuning Modification Levels .....	10
Glossary .....	11

# ECU Map Descriptions

## 3D Maps

---

### Fuel Maps

---

The fuel maps contain AFR data, based on RPM and calculated engine load. When altering fuel maps, bear in mind that the AFRs are only theoretical, they are calculated AFR, and that the ECU will operate in open loop fuelling mode when on full power.

For this reason, add and remove fuel in small increments, and watch for changes in actual AFR, based on wideband lambda readings. ALL tuning should be checked with a wideband Lambda sensor.

The A/F Ratio is only under closed loop control on part throttle.

Generally once the vehicle makes positive boost pressure the AFR is in open loop and reading from the Calculated Fuel Table. Changing something simple like Fuel pressure from say 3.0Bar to 4.0Bar would make this table inaccurate, bear this in mind.

### High Octane

---

This fuel map is used when there is no detonation detected. If the ECU has been tuned properly, this is the only fuel map that will be accessed.

### Low Octane

---

If continuous detonation occurs or a serious CEL occurs the ECU will default to this map. Make sure that the values in this map are 'richer' in positive pressure than the 'high octane' map.

### Ignition Maps

---

These maps contain the ignition timing values, based on RPM and calculated engine load. Detonation should always be listened for, the ECU will remove Ignition timing if detonation occurs but it is safer to avoid detonation as the ECU takes crude action to deal with det.

The High and Low Octane maps operate under the same circumstances as the fuel maps.

### VVT (Variable Valve Timing) Map (MIVEC)

---

This map controls the advance of the intake cam (note that 1 degree at the camshaft is 2 degrees at the crankshaft). This number is in camshaft degrees before Top Dead Centre. Modifying the cam timing map can increase power and turbo response, but too much advance can significantly increase in cylinder pressures. This is dependent on Camshafts, Turbocharger and naturally any item which will change.

## 2D Maps

---

### Boost Limit

---

This determines the boost limit against Engine Load. The Engine load is similar to Boost Pressure so 100% Engine Load equals roughly 0 psi (or atmospheric pressure). An engine load of 200% is approximately 1 Bar Boost (2 Bar Absolute). You MUST add the 1D Map value of 'Boost Control - Desired Engine Load Offset' to see the true boost limit threshold.

### Open Loop Load

---

This map determines when the ECU switches from 'Closed Loop Lambda Control' to 'Open Loop' based on 'Engine Load'. When the Engine Load value is reached (at X RPM) the ECU will switch to 'Open Loop' fuelling.

### Open Loop Load Throttle

---

### Injector Battery Voltage Compensation

---

This table needs to be altered when the original Fuel Injectors have been replaced by an aftermarket brand. This is the delay time added to compensate for the 'turn on (reaction)' time of a fuel injector. This 'lag time' changes with battery voltage, the higher the voltage the quicker the injector is able to switch. Most injector manufactures offer 'injector lag time' sheets for their injectors.

### Acceleration Enrichment

---

This map determines the percentage of fuel added at each Rpm based off of throttle pedal input.

### Turbo Dynamics

---

The Turbo Dynamics tables are used for 'boost' error compensation. These maps control the rate at which the wastegate duty cycle is altered (according to amount of error) in order to produce the desired level of boost. This map represents the actual change in duty cycle according to the amount of error.

Standard dynamics are set to take a large percentage of wastegate duty with only a small amount of boost error causing boost to drop very quickly. If you struggle with overboost and boost oscillations then we suggest you reduce the big values in the map. This will stop the boost pressure from 'surging' either side of the target value.

### Wastegate Duty

---


The Maximum allowed wastegate solenoid duty at each RPM point, sometimes this is less around peak torque (3-4000rpm) to prevent over boost. The number of wastegate duty maps varies between different ROM files though there are usually 3 or 4 maps.

We suggest all maps are set the same as the ECU can swap between these in different conditions, which will affect boost control.

## Boost Desired Engine Load

Boost control is managed by 'Boost Desired Engine Load' maps. Values in the table MUST be added to the 'Boost Control - Desired Engine Load Offset' (found under 'Data values') to see the true Desired Engine Load target. There are normally 3 or 4 of these maps. These tables are used differently between regions and models. It is best to set all the tables the same.

We can see below the 'Desired Engine Load' at 4000rpm is 146% (Engine Load can be seen in either the Fuel Table or Ignition Table). We can also see the Desired Engine Load Offset is 40%, so the total Desired Engine load at 4000 rpm would be 196%. This is equivalent to about 1.96 Bar Boost (absolute), these are Engine Load and NOT PSI or Bar, though approximately 100% Engine Load equals Atmospheric Pressure, which is 0 psi, 0 Bar of boost. 200% equals around 14-15psi, 1 Bar boost. Engine Load of 100% roughly corresponds to an absolute manifold pressure of 1 bar, so 225% would be 2.25 Bar i.e. 1.25 Bar of boost

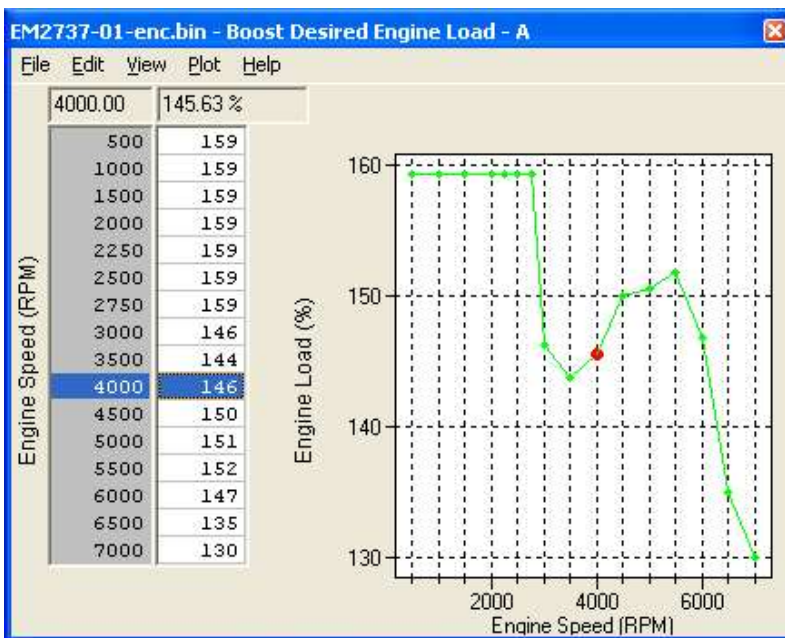

This ROM file (EM 2737) is from an Evo 6 GSR that runs around 1 bar (14.5 psi) boost pressure.



Desired Engine Load Offset

Desired Engine Load Map

*It is possible with a bit of time you 'may' find that the ECU uses these for different desired boost in different gears or in Open/Closed Loop fuelling mode and it may even default to one of these in the event of a CEL condition.*

## 1D Maps - Data Values

---

### **Boost Control - Desired Engine Load OFFSET**

---

The Desired Engine Load OFFSET value MUST be added to all the **2D Map** "Boost Desired Engine Load" maps to see the correct Desired Engine Load for reference against the Fuel or Ignition tables. Increasing this value will raise all of the Boost curves together by the same amount.

### **Boost Limit Timer Delay**

---

If the Engine Load exceeds the **2D Map** 'Boost Limit' this timer must expire before the Boost cut will occur. The standard time is normally 1000milliseconds (1 second) and the maximum setting is 6375 milliseconds (just over 6 seconds). So in the standard ROM you can exceed the standard 'Boost Limit' **2D Map** for 1 second before Boost/Fuel cut will occur. This explains quite often after a full performance exhaust system has been fitted that the vehicle will Boost/Fuel cut in 5th and 6th gear around 3000 rpm as this is when maximum boost is created. If the boost does not reduce below the Boost Limit within 1 second then Fuel Cut will cut the Injectors for a split second causing complete power loss on peak torque.

### **Injector Scaling**

---

Injector Scale size in CC, if the injectors have been replaced then change this calibration value. You may also need to alter the **2D Map** 'Injector Battery Voltage Compensation Map'.

*This map is not always a direct correlation to actual fuel injector size.*

### **Rev Limit**

---

Hard cut rev limit. *See also 'Stationary Rev Limit – Launch Control'*

### **Speed Limiter (on-off)**

---

Vehicle Speed Limiter, Japanese Domestic models are normally limited to 180 KPH / 118 MPH.

### **Minimum Coolant Temperature for Closed Loop**

---

This is the coolant temperature (degrees Celsius) that 'closed loop' fuelling is activated.

### **Lean Spool: Enable RPM**

---

Before this RPM, the ECU will run AFRs close to 14:1. Can be helpful for 'spooling' larger turbochargers, but be mindful of higher EGTs and possible detonation.

### **Wastegate Solenoid (Activation-Deactivation)**

---

The ON and OFF engine RPM that the wastegate solenoid is active. If the vehicle Rev Limit is raised to 8000rpm then it would be necessary to raise the wastegate solenoid switch off RPM from 7500 rpm to say 7800 rpm. There is a low RPM limit to stop the solenoid working at low engine RPM which would be to noisy and unnecessary.

The parameters work as follows:

**'Wastegate Solenoid Activation RPM – Active'**

Low RPM solenoid 'turn on'. This will be a higher value than above

**'Wastegate Solenoid Activation RPM – De-Activate'**

Low RPM solenoid 'turn off'. This will be a lower value than above

**'Wastegate Solenoid De-Activation RPM – De-Activate'**

High RPM solenoid 'turn off'. This will be a higher value than above

**'Wastegate Solenoid De-Activation RPM – De-Activate'**

High RPM solenoid turn on. This will be a lower value than above

## **High Intake Air Temp Idle**

---

When Intake air temperature is too high the idle speed is increased to make the idle more stable, this is different for both A/C activated and deactivated.

The amount the idle speed actually increases will depend on the amount of Idle Stepper Motor 'steps' the ECU is allowed to use to increase the Idle Speed.

*The requested 'idle speed' and 'step' parameter will need to be modified together to achieve positive results.*

## **IC Relay (Intercooler water spray control)**

---

Various parameters for activation and control of the intercooler water spray system.

### **IC Relay Timer ON Mode Switch Time**

Time period for activation of intercooler water spray system from 'switch on (auto)'

### **IC Relay Timer Control RPM**

Minimum RPM for system activation (in Auto mode)

### **IC Relay Control Vehicle Speed**

Minimum Vehicle Speed for system activation (in Auto mode).

### **IC Relay Control EV**

Minimum Engine Load for system activation (in Auto mode).

### **IC Relay Timer On Time**

Amount of time that water will spray when all control parameters are met (RPM, Speed, Load and Temperature).

### **IC Relay Timer Off Time**

Minimum amount of time between water spray events.

### **IC Relay Air Temp**

Temperature (in Celsius) above which the water spray system is active.

## **Stationary Rev Limit – Launch Control**

---

Secondary RPM limiter that is engaged when the vehicle is stationary, very useful for 'launch control'

## **Additional Maps**

---

Additional maps will be added as further testing and development is carried out.

These maps will be added, with relevant help files, to new versions as we release them.

Please contact us regularly to receive new software versions.

## HINTS and TIPS

---

- If the vehicle will not start then ensure you have removed the 'White' Programming Connector next to the OBD2 socket. On some models it is also necessary to fully depress the clutch for the engine to turn over. Alternatively, a programming error can cause the ECU to lose its 'Unique ID' (please refer to previous section entitled 'Current ECU Unique ID' to learn more).
- Most of the standard EVO ROM files have been kindly calibrated and tuned to around 1.6-1.7 Bar of boost pressure. So by just increasing the desired boost pressure (Boost Desired Engine Load) and Boost Limit/Boost limit timer then the tuning is actually pretty good from the factory!
- The EVO5-6 ECU is located in the passenger foot well up above the kick panel, it is secured to the "A" pillar. It can just be seen with a torch if you look closely. Removal requires disconnecting the ECU connector harness and removing the two 10mm bolts, take care to see where the ECU earth grounds are located.
- The EVO7-9 ECU is located behind the passenger glove box. Open the glove box and remove the glove box stop bung nearest the centre of the vehicle. The glove box can then be fully opened and can be removed completely showing the back of the ECU. Remove the two 10mm bolts and the ECU can now be removed.
- Evo 5-6 tend to use NGK PGR6A these should always be replaced with the EVO7 PGR7A models or use the superior Iridium IGR7A-G. Other Spark Plugs are available including BPR7EIX (you can also search the Internet to find others).

*EVO 9 has different "longer reach" special spark plugs.*

- AFR should always be checked with a wideband Lambda sensor and we would suggest a target AFR of around 11.5:1 at peak torque (3500-4000rpm) dropping to around 11:1 by 6000rpm
- Detonation should be checked for using an Engine Knock listening device or a stethoscope, the High Octane Ignition map should be adjusted if detonation is heard at the correct Engine RPM and Engine Load (OBD2 software).

Diagnostic Software: Data logging can be made on EVO7-8 models using laptop based generic OBD2 diagnostic software; this can provide Engine RPM, Engine Load% and Ignition Timing. EVO 5-6 models do not support OBD2 diagnostics. If you have a Subaru Select Monitor (Hitachi HDM2000 diagnostic monitor) there is a Mitsubishi Diagnostic Cartridge available (that will plug into the Select Monitor Cartridge port) direct from Japan at <http://www.himic.co.jp/test/shouhin/hdm/table.htm> (Latest Cartridge version is V1.46)

*this is NOT something EcuTeK can source or supply.*

- EcuTeK cannot support Mitsubishi EVO ECUs with DeltaDash Data logging software due to the EVO using the much slower OBD2 communication protocol. We use Laptop based generic OBD software called ScanMasterPro from <http://www.onboarddiagnostics.co.uk/eobd/scanmasterpro.html>
- If Desired Engine Load and Wastegate Tables are set to maximum and the desired boost is not achieved then you may need to change the Wastegate Solenoid restrictors. The boost increase is dependent upon the size of the exhaust system. If you want 1.4 bar and only make 1.3 bar then there is a small restrictor you can remove pressed into the Wastegate Solenoid "IN" port. On Evo 5-6 it is a very small black plastic insert and Evo 7-8 it is a small steel insert (on some EVO 8 and 9, this restrictor has been made of plastic.) also, on USA spec Evo 8 there is a restrictor in the line leading from the boost control solenoid to the 'T' junction at the turbocharger.

Removing the restrictor screw will allow the "vent" more boost actuator giving a boost. If this still does not pressure to the desired make the other restrictor solenoid supply pipe located down by the housing. It is located tube in-between the "T" wastegate actuator) and the Compressor housing pressed fitting that supplies the positive boost pressure for the wastegate solenoid. It is normally around 1.1mm I.D. (varies between models) and can be heated with Butane Gas torch and filled with solder. Then just redrill the restrictor to the new required size (normally 1.0mm or 0.95mm).



with a small self tapping wastegate solenoid to pressure from the increase of about 1-2 psi. increase the boost level then you will need to fitted in the wastegate smaller. This restrictor is turbocharger compressor inside the small vacuum piece (that goes to the

*You will likely have to change the 'Max Wastegate Duty' maps to prevent 'overboost'*

- The standard Injectors are generally OK for around 380 BHP using a high flow fuel pump; don't forget fuel pressure can also be raised to increase AFR.
- Generally about 360-370 BHP is the maximum for the standard turbochargers, later Evo7 and Evo8 models seem to make more power than Evo 5 and Evo 6 versions.  
*We advise to limit positive manifold pressure to 1.6 bar with the standard turbo*
- The Ralliart white Sports ECUs can be reprogrammed using EcuTeK FlashEVO software.  
*Please contact EcuTek directly for proper ROM files when modifying the Ralliart ECUs*

## Suggest Tuning Modification Levels

- Level One: ECU tuning can generally achieve around 310-320 BHP and 285 lbs/ft torque with on a completely standard car, using around 1.3 Bar Boost.
- Level Two: Using a Full Exhaust System and 1.4Bar boost (Evo 5-6) and 1.5 Bar boost(Evo 7-8) you can make around 330 BHP-350 BHP with 300-320 lbs/ft torque.  
*Over 330 BHP with Evo 5-8 models it is highly recommended to use an upgraded Fuel Pump.*
- Level Three: An Intake system and different camshafts can take you to 360+ BHP with 330+ lbs/ft torque.

# Glossary

**AFM**

Air Flow Meter

**AFR**

Air Fuel Ratio

**FMIC**

Front Mounted Intercooler

**ISS**

Intercooler Spray System

**MAF**

Mass Air Flow (sensor)

**MAP**

Manifold Absolute Pressure (sensor)

**MRP**

Manifold Relative Pressure or boost pressure.

**O2 Sensor**

Lambda Sensor (oxygen sensor)

**Calculated Air Flow**

The air flow sensor voltage is not linearly related to the amount of air flow. The ECU uses a scaling map to translate the air flow sensor voltage into an air flow rate value i.e. calculated air flow.

**Calculated Engine Load**

The ECU calculates engine load based on calculated air flow divided by engine RPM. It is effectively how much air enters the engine on each revolution.